



Legend

- 1) A 230-Volt electrical supply should be supplied to the panel. This should be externally fused at 3 Amps using a fused spur and should be connected to the terminals marked "LNE Power".
 - 2) A volt free connection to the fire alarm panel.
 - 3) A volt free connection to the remote emergency stop connection in the Merlin panel.
 - 4) Terminals connections are available on the circuit board for connections to Building Management systems. This terminal should be wired using low voltage cable.
- For further information please refer to S&S Northern operating and installation instructions.

- 230 VOLT MAINS LIVE
- NEUTRAL
- EARTH
- LOW VOLTAGE



Client
Job title
Drawing title

Notes

All discrepancies between information shown on the drawing and information in the specification to be referred to S & S Northern prior to proceeding.

Copyright in all documents and drawings prepared by S & S Northern and any work executed from these documents and drawings shall, unless otherwise agreed, remain the property of S & S Northern.

Amendments		
Scale N.T.S.	Date	Drawn BT
Dwg. No. FAB1		Rev.