

**Description**

The EP-TL2 is for installing in a position where a fire hazard may occur, e.g. above boilers and interrupt the electrical supply to a gas valve or alarm. The link consists of a cast aluminium enclosure with a perforated cover having a temperature sensitive fuse.



**Features**


- Cast Aluminium Housing
- Replaceable Thermal Fuse



**Technical Specification**

**Switch Rating:** 5A @ 240Vac SPDT  
**Melting Point:** 72°C  
**Housing Dimensions:** 75 x 50 x 30mm

**Wiring Connections**

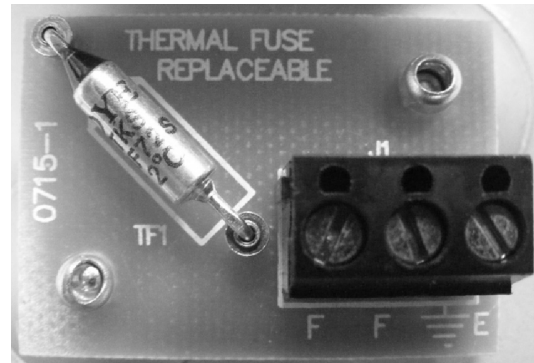

**Order Codes**

**EP-TL2** Electro Thermal Link  
**EP-TLF** Replacement Fusible Link 72°C

**Installation**

**Warning:** Hazardous voltage can cause electrical shock. Disconnect power before proceeding with any work on this equipment.

Procedure:

1. Remove ventilated cover
2. Mount using the base as a template for holes
3. Ensure unit is mounted with perforated cover pointing downwards and ventilation slots are not blocked
4. Make necessary electrical connections
5. Replace cover